
THE WOODLANDS HILLS GUIDELINES FOR SURVEY RIBBONING BEFORE A SITE CLEARING INSPECTION

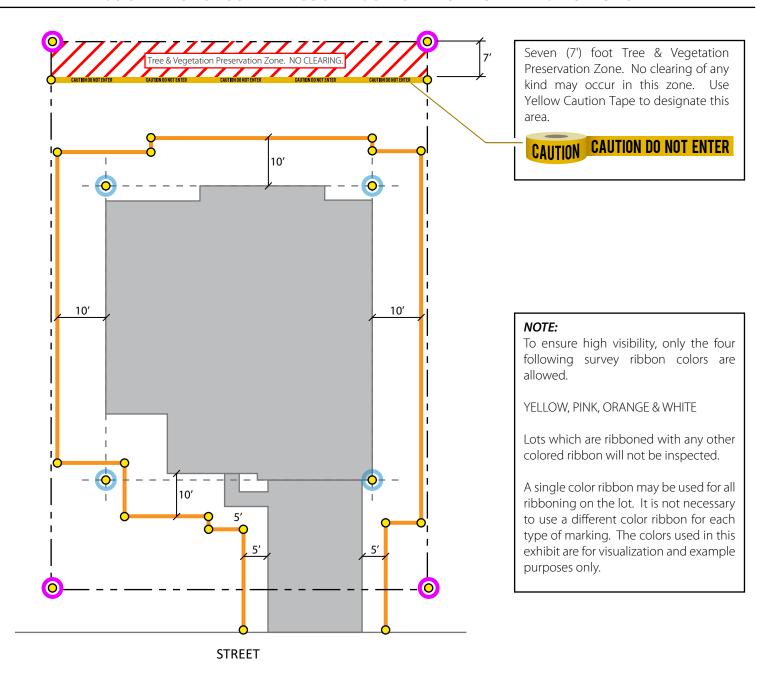

K E Y	
O WOOD SURVEY STAKE	Standard wood survey stake must be used to mark all points. This includes: Property Pins, Envelope Corners and Turning Point in the Offset Ribbon.
PROPERTY PIN	At least four Property Pins must be marked with wood stakes, topped with one of the four approved ribbon colors to make the point as visible as possible.
ENVELOPE CORNER	At least four Envelope Corners must be marked with wood stakes, topped with one of the four approved ribbon colors to make the point as visible as possible. These may be squared off showing the furthest envelope point in each direction.
OFFSET RIBBON	A continuously ribboned area, offset a maximum of ten (10') feet beyond the building foundation and a maximum of five (5') feet beyond any flatwork and must follow all of the contours foundation and flatwork. NOTE: Ribboning may NOT extend onto any adjacent lot(s), regardless of ownership.